



## Camera network connection and settings

1 、 Computer download and install hikvision "SADP" software tool

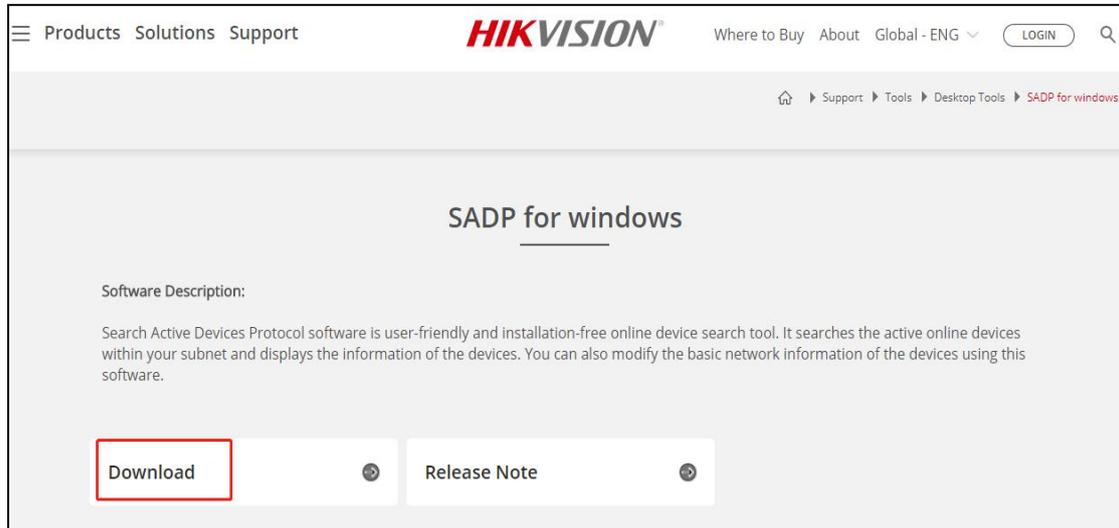


Download : <https://www.hikvision.com/en/search/?q=SADP>




2、 Please keep the computer and camera on **the same LAN**--Please use **a network cable to connect, do not use Wifi**

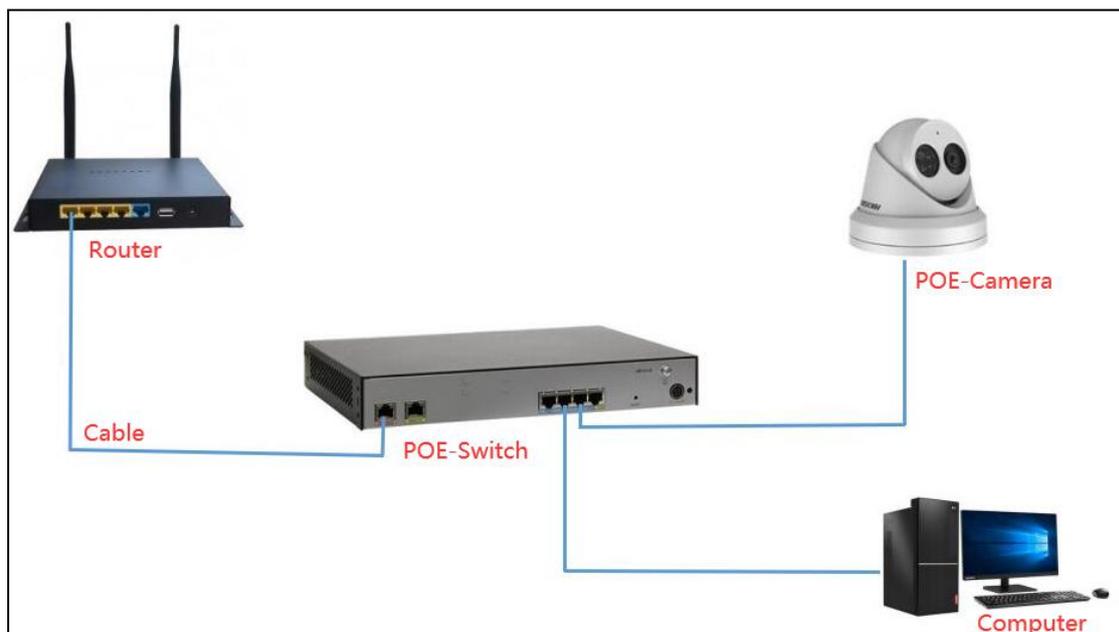

- 3、 After installation,open the software and click the Refresh ① --  
 Search for the IP address of the camera ②

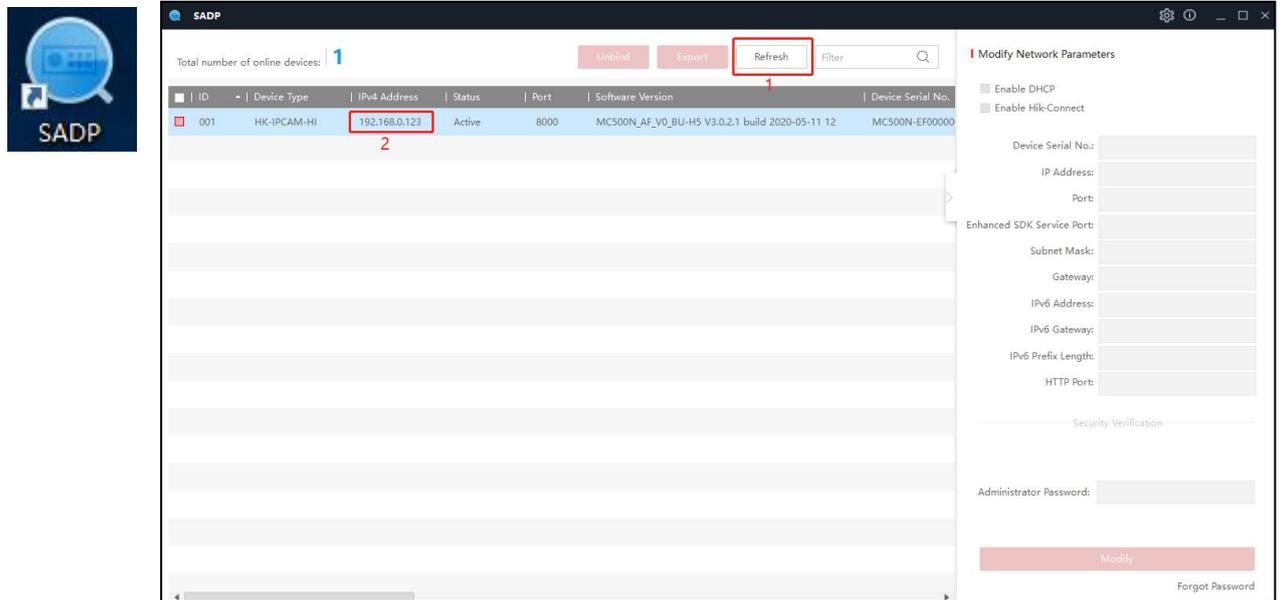

- 4、 Query your computer IP address--Open Network and Sharing Center  
 Center---Details--View your computer's **IPV4 Address,Subnet Mask and Gateway**

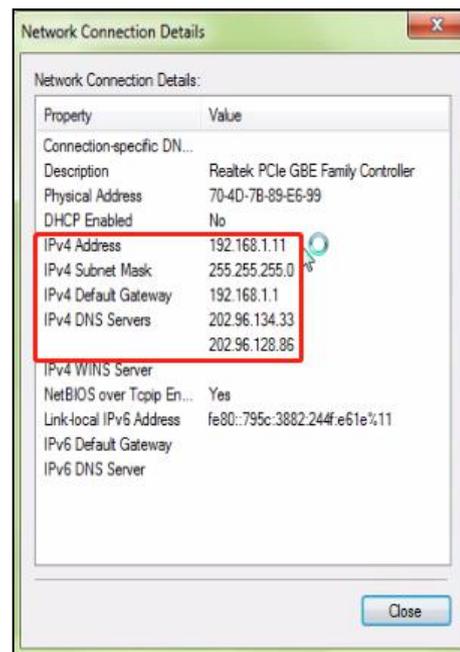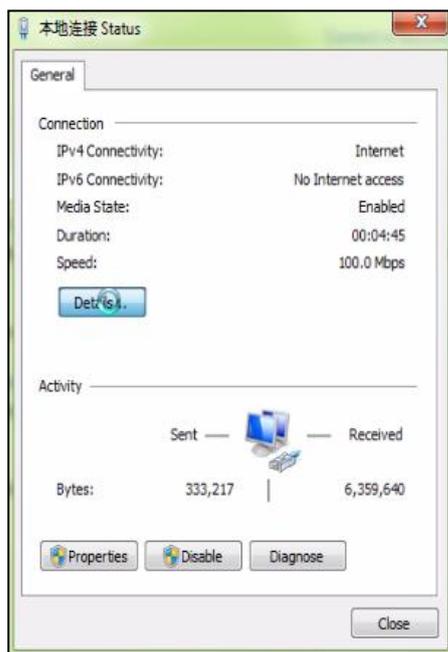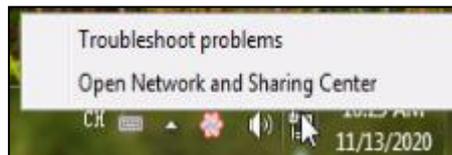

## 5、 Modify the IP address of the camera and computer in the same network segment

Setting method: ① Select the IP address of the camera

② Modify the IP address and gateway of the camera

③ Enter the camera password: **123456**

④ Select Modify--Parameters modification completed

The screenshot shows the SADP interface with a table of online devices. The first device, ID 001, is selected. The 'Modify Network Parameters' dialog is open, showing the following fields:

Field	Value
Device Serial No.	MC500N-EF00000005121E4
IP Address	192.168.1.123
Port	8000
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
IPv6 Address	
IPv6 Gateway	
IPv6 Prefix Length	0
HTTP Port	80


The 'Administrator Password' field is masked with dots. A red box highlights the 'Modify' button at the bottom right.

The screenshot shows the SADP interface with the same table of online devices. The first device, ID 001, is selected. The 'Modify Network Parameters' dialog is open, showing the following fields:

Field	Value
Device Serial No.	
IP Address	
Port	
Subnet Mask	
Gateway	
IPv6 Address	
IPv6 Gateway	
IPv6 Prefix Length	
HTTP Port	

The 'Administrator Password' field is masked with dots. A red box highlights the 'Modify' button at the bottom right.

6、 Double-click the camera IP address or Enter the browser to enter the camera IP address: **192.168.1.123**---Go to the login interface

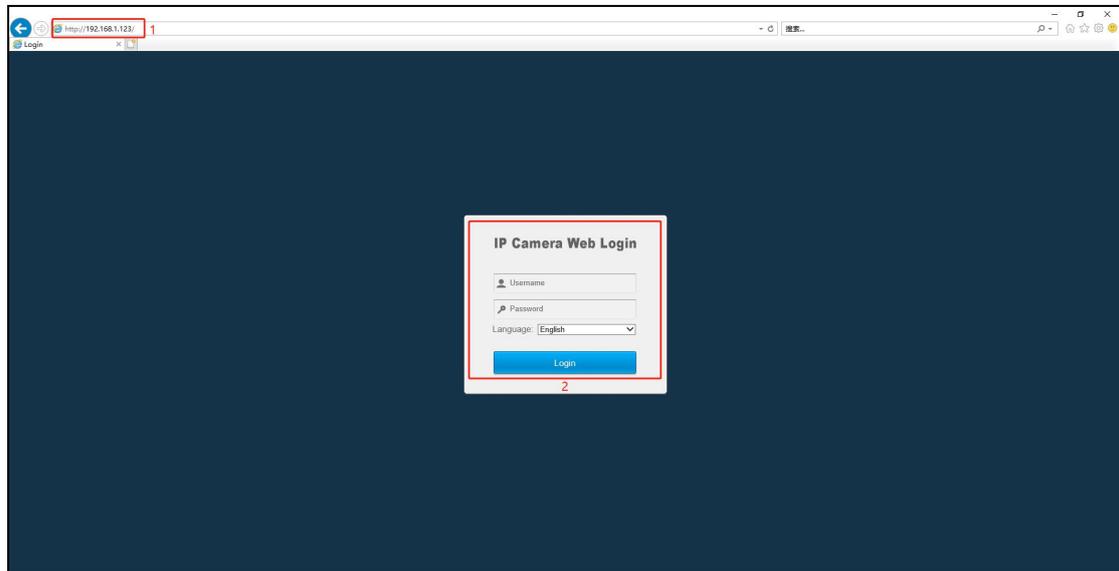

7、 Enter camera **username:admin** and **password :123456**---login successful

